

Application Guide - for self adhesive vehicle chevron kits


All About Chevrons - www.allaboutchevrons.com - 023 9252 0333

For smaller straight sections


1 - Thoroughly clean the vehicle with warm soapy water. Dry off then wipe with a cleaner such as methilated spirit.



1 - Clean

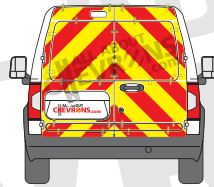

2 - Position

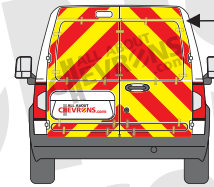

3 - Tape

2 - Position each chevron section with tabs of masking (or similar) tape.

3 - For smaller sections with a straight edge, stick a strip of tape along the entire edge.



4 - Hinge & Peel away Backing Paper



5 - Apply chevrons



6 - Continue

4 - Hinge the section on the tape and pull away the backing paper.

5 - With the backing paper removed apply the chevron using a squeegee or similar application tool. Apply pressure in a sideways motion, gradually moving over the chevron until that section is stuck.

6 - Continue with the other sections.

For larger and shaped sections

7 - For larger or more shaped sections use the centre hinge method.


Instead of sticking a strip of tape along one edge, stick it across the middle of a chevron section.



7 - Tape across middle of a section



8 - Hinge & peel backing

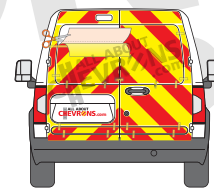

9 - Cut off backing

8 - Hinge forward chevron and peel away backing.

9 - Cut away backing.



10 - Apply 1st half of section



11 - Apply 2nd half



11 - Apply 2nd half

10 - With the backing paper removed apply 1st half of the chevron.

11 - Remove strip of masking tape, hinge other half and peel away backing. Apply 2nd half of chevron section.

12 - Continue with all sections and remove all tabs of masking tape.

13 - Any bubbles (what bubbles) can be pricked with a pin or sharp knife and pressed down.

14 - Stand back and admire.

12 - Tell your friends about All About Chevrons

Great Job !

ALL ABOUT
CHEVRONS.com

DO NOT APPLY WET!